

DC current transducer DK-B5

Split core transducer for the electronic measurement of DC current, with galvanic isolation between the primary circuit (high power) and the secondary circuit (electronic).

0-5 V DC output voltage proportional to measured current.







Electrical data

Drim	an a aminal autrent		Turne	RoHS since			
Primary nominal current		Ouput current	Туре	date code ¹⁾			
	I _{PN} (At)	\mathbf{V}_{OUT} (V DC)					
	50, 75, 100	0-5	DK 100 B5	0606			
100, 150, 200		0-5	DK 200 B5	0605			
V _c	Supply voltage		20-50	V DC			
\mathbf{R}_{L}	Load resistance (min)		25	kΩ			
$\mathbf{V}_{\rm SL}$	Output voltage limit	ation	5.75	V DC			
BW	Frequency bandwic	lth	DC	Hz			
ľ	Current consumption	on (max)	100	mA			
Accuracy - Dynamic performance data							
х	Accuracy $T_{A} = 25^{\circ}C$	2	±2	% of FS			
e	Linearity error		± 0.75	% of I _{PN}			
t,	Response time to 90 % of $I_{_{PN}}$ step		< 100	ms			
General data							
T _A	Ambient operating	temperature (0-95 %	5 RH) - 20 + 50	°C			
T _s	Ambient storage te		- 20 + 85	°C			
m	Mass		120	g			
IPxx	0		IP 20				
	Standards		Safety IEC 61010-1: 2001				
		EMC ²⁾ IEC 61326-1: 2005					

Notes: ¹⁾ The 4-digit date code (yyww) indicates the manufacturing year (first 2 digits) and week (last 2 digits)

 ²⁾ For IEC 61000-4-3, IEC 61000-4-6 and IEC 61000-4-4 Criterion B: temporary impairment to operational behavior.

I_{PN} = 50 .. 200 A



Features

- DC measurement (magnitude only)
- Split core case
- Three jumper selectable ranges
- Industry standard 0-5VDC unipolar voltage output
- Panel mounting
- Isolated plastic case recognized according to UL 94-V0.

Advantages

- Large aperture
- Extended measuring range
- High isolation between primary and secondary circuits
- Easy to mount, cut installation costs
- No insertion loss (voltage drop).

Applications

Battery banks

Load current monitoring Charging current monitoring Operation supervision

• Power supplies

DC power or auxiliary loads measurement

• *Electric heating elements* Faster response than temperature sensors.

Application domain

• Energy & Automation.

Page 1/3



Isolation characteristics

\mathbf{V}_{d}	Rms voltage for AC isolation test ¹⁾ , 50 Hz, 1 min	3	kV
V	Rated isolation voltage rms ²⁾ , reinforced isolation, CAT III, PD2	150	V

<u>Notes</u>: ¹⁾ Between primary (completely filling the primary aperture) and secondary ²⁾ If insulated cable is used for the primary circuit, the voltage category could be improved according to the insulation characteristics given by the cable manufacturer. For example:

Cable isolation (primary)	Category
HAR 05	600 V CAT III
HAR 07	1000 V CAT III

Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly! Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications.

Ensure you get up-to-date technical information that can be found in the latest associated datasheet under www.lem.com.



Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage! The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training. The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor. The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the

related systems and components manufacturers' operating instructions.



Caution! Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (e.g. primary conductor, power supply).

The user shall ensure to take all measures necessary to protect against electrical shock.

The transducer is a built-in device containing conducting parts that shall not be accessible after installation.

A protective enclosure or additional insulation barrier may be necessary. The transducer shall not be put into operation if the jaw opening is open (split core version) or the installation is not completed.


Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.

Page 2/3



Dimensions DK-B5 (in mm, 1 mm = 0.0394 inch)

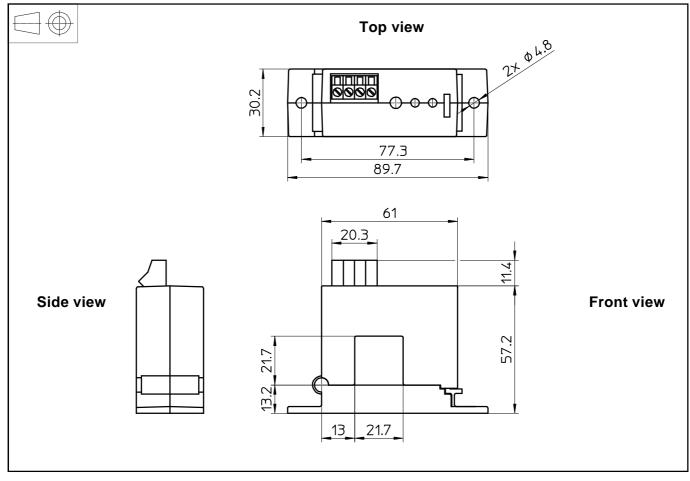

Mechanical characteristics


General tolerance

• Primary aperture

- ± 1 mm 21.7 mm square
- Panel mounting
 Distance between holes
- 2 holes arnothing 4.8 mm
- 77.3 mm

Transfer characteristics


• DC measurement¹⁾ (magnitude only)

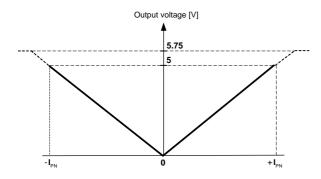

<u>Note</u>: ¹⁾ The performance specified in the datasheet is valid within the 0-5 V DC output range only.

Connections

- Dead front captive screw terminals
- 12-22AWG solid or stranded
- Observe polarity
- Output loop is powered by DK Transducer. No loop power supply required

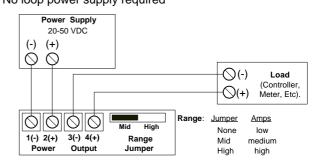

Option on request

• DIN rail adaptor (ref.: F2.90.98.000.1)

Remark

Temperature of the primary conductor should not exceed 60°C.
 Page 3/3